




WITH BUILT-IN ANTIMICROBIAL  
PRODUCT PROTECTION



POWERED BY  
**MICROBAN**®

Treated with the active  
substance silver phosphate  
glass to prevent microbial  
growth on the product surface

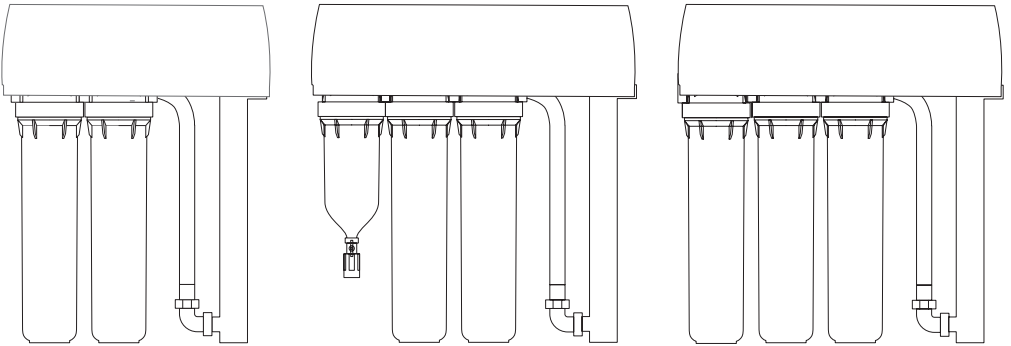

**INSTALLATION, USE AND MAINTENANCE MANUAL**

**PRO**  
SYSTEM

# INDEX

INTRODUCTION .....	Pag. 3
PREPARING YOUR SYSTEM .....	Pag. 4
INFORMATION ON THE DISPOSAL OF THE SYSTEM .....	Pag. 4
POSITIONING YOUR SYSTEM .....	Pag. 5
INSTALLATION REQUIREMENTS .....	Pag. 5
ELECTRICAL POWER SURGE PROTECTION .....	Pag. 5
INITIAL INSTALLATION PROCEDURE .....	Pag. 5
LAMP BALLAST OPERATION .....	Pag. 9
BALLAST DISPLAY INFORMATION .....	Pag. 9
MAINTENANCE .....	Pag. 11
ROUTINE MAINTENANCE OF THE SELF CLEANING FILTER .....	Pag. 11
CARTRIDGE REPLACEMENT PROCEDURE .....	Pag. 11
LAMP REPLACEMENT PROCEDURE .....	Pag. 12
QUARTZ SLEEVE MAINTENANCE/REPLACEMENT PROCEDURE .....	Pag. 13
UV SYSTEM CHARACTERISTICS .....	Pag. 13
DECLARATION OF CONFORMITY .....	Pag. 15

Thank you for purchasing an Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC Water Treatment System.

**Note:** This water filtering appliance should only be installed by a fully qualified & licenced plumber. Any operation on the electrical part of the product must be carried out by a qualified electrician, closely following the instructions supplied.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

*Children should be supervised to ensure that they do not play with the appliance*

Read the maintenance instructions before opening the appliance.

Appliances that are obviously damaged must not be operated.

## INTRODUCTION

Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC are designed to reduce turbidity and to kill harmful bacteria and viruses in water supplies. By means of UV-C rays, a purification process that's eco-friendly and chemical-free, DNA and RNA of microorganisms is damaged, resulting in an effective germicidal action. A double (BIG F PRO SANIC) or a triple-stage (HYDRA BIG F PRO SANIC) pre-filtration unit ensures that particulate matter or other pollutants do not shield microorganisms from the UV-C light.


This system will effectively treat water, depending on the required UV dosage and existing water quality.

BIG F PRO SANIC / HYDRA BIG F PRO SANIC features SANIC technology, with built in antimicrobial product protection. The system is designed for mains and rainwater supply.

The Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC system cartridges and lamp need to be regularly maintained and/or replaced to guarantee optimum performance. For replacements contact your nearest Atlas Filtri dealer. Quartz sleeve needs to be cleaned periodically to ensure optimum performances.

HYDRA BIG F PRO SANIC system is designed and constructed with innovative technical solutions. The first-stage filter cartridge is efficiently cleaned by washing it in counter-current, to easily remove sediments deposited on the cartridge outer surface.

When the filtering element is clogged, it is simply cleaned by opening the valve on the bottom of the bowl

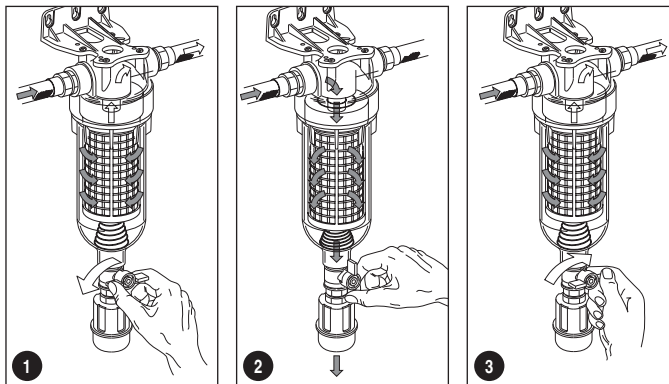

(Fig. 1). This operation generates a depression in the filter that pushes the cartridge down, automatically reversing the water flow from the inside to the outside of the cartridge (counter-current)(fig.2). This water flow in counter-current carries particles and substances deposited on the cartridge to the drain. After closing the valve, the initial pressure distribution is restored and the internal spring returns the cartridge to its service position (fig.3). The filter is provided with a drain funnel, a device designed to prevent pollution by backflow,

in accordance with European standard UNI EN 1717 of November 2002. This device prevents backflow by making all elements downstream from the drain valve vent to atmosphere (protection unit symbol: DC).

**Warning:** the above described operating modes and the back-wash cleaning in counter-current occur in excellent conditions with minimum 1.8 bar supply pressure and minimum 2000 L/h flowrate.

**Warning:** According to the European standard EN 60204-1 (safety of the set-up off the electrical equipment-general rules) low tension electrical equipment (rule 2006/95/CE) must be connected to a earthed current tap.

## Safety warning

UV-C radiation can cause serious burns to unprotected skin and eyes, it is therefore compulsory not to connect the appliance to the socket without having first fitted the UV lamp in its housing. Incorrect use of this appliance may increase the bacterial content of the water unless supplementary treatment is provided.

### INFORMATION ON THE DISPOSAL OF THE SYSTEM

Applicable disposal methods may be different in countries outside of the European Union. Ask your retailer or local authority about the requirements that apply in your country.

We remind that, according to what is fixed by D.L.25 July 2005, № 151 "Accomplishment of directives 2002/CE, 2002/96/CE and 2003/108/CE, concerning the reduction of the use of dangerous substances in electric and electronic equipment, and the disposal of waste" both mercury vapours lamps and electrical panels, when no longer used, must be considered as special waste, and in the same way disposed of.

To do that, it is possible to send to specialized centres for the recovery of dangerous materials, or to contact directly our technical department.



INFORMATION TO USERS pursuant to art. 14 of the 2012/19 / EU DIRECTIVE OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately and not disposed of together with other mixed urban waste.

Please contact your municipality, or local authority, for all information regarding the separate collection systems available in the area. The retailer is obliged to collect the old equipment free of charge when buying new equipment of an equivalent type, for the purpose of starting the correct recycling / disposal. Appropriate separate collection for the subsequent start-up of the disused equipment for recycling, treatment and environmentally compatible disposal helps to avoid possible negative effects on the environment and on health and favors the re-use and / or recycling of the materials it is composed of the equipment.

## Caution

**Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** are designed to reduce turbidity, to remove organic pollutants (BIG F PRO PLUS SANIC) and to kill harmful bacteria and viruses in water supplies. Do not use with chemically unsafe water (water that does not comply with the legal limits in force in your country) or with water of unknown quality. It is compulsory to perform a complete water analysis and, in case, adopt further treatments before using the system.

## PREPARING YOUR SYSTEM

Please read all instructions carefully as failures caused by incorrect installation or operation make the warranty void.

Carefully check all the components (especially the lamp) are present and not damaged:

- 1.Filter System and UV chamber (with double or triple-stage filtration unit\*, flexible steel hose and metallic frame).
- 2.UV Lamp and quartz sleeve (in cardboard tube).
3. Bag containing: spanner, manometers (2), lubricant (3), joint (1), gaskets (2) and the metallic frame key.
- 4.Ballast (**Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** systems come with Ballast pre-installed).
5. This user guide.

**\*note:** it is mandatory that the last sediment filtration stage mounts a 1 µm sediment cartridge.

Remove all the packing materials before using.

You must dispose of this product and its packaging according to local laws and regulations.

## **POSITIONING YOUR SYSTEM**

This appliance is intended to be permanently connected to the water mains.

Choose a location with a structurally appropriate mounting position. Allow at least a chamber length space above the unit for removal of the lamp and quartz-sleeve and 120 mm below the housings for replacing the cartridges and maintenance.

**Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** systems must be installed in a sheltered position, protected from direct sunrays, weather, rain, frost, water and have adequate ventilation.

All **Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** systems should be protected from harsh environments where overexposure to salt or aggressive chemicals can occur.

## **INSTALLATION REQUIREMENTS**

**Warning - FOR CORRECT OPERATION OF THIS APPLIANCE, IT IS ESSENTIAL TO OBSERVE**

Cold water line only.  
Power supply: AC 110-240 V; 50/60 Hz  
Max Working Pressure: 8,3 bar  
Working temperature: 4-40 °C (protect from freezing).  
Max Flow rates: **mod.** 156 3240 L/h (54 lpm) **mod.** 256 4200 L/h (70 lpm) **mod.** 267 5700 L/h (95 lpm)

### **THE MANUFACTURER'S INSTRUCTIONS.**

**Note:** Ensure the connection of the device meets the applicable plumbing code in your area, in case of Australia and New Zealand installation shall comply with AS/NZS 3500.1 and the Plumbing Code of Australia.

**Note:** Refer to the NCC volume Three, the plumbing Code of Australia for the requirement of backflow prevention, including the installation of a certified device if not supplied.

**Note:** Only use thread seal tape (not included) for the manometers and nipple-head connection. Do not use liquid sealant.

This appliance is to be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.

## **ELECTRICAL POWER SURGE PROTECTION**

An electrical power surge or spike can travel through the supply lines and cause serious damage to your electrical equipment. The **HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** have a fuse to protect the circuit. The fuse is not a lightning arrestor and may not protect the product if lightning or a very powerful surge hits the unit. If the installation is subject to electrical power surges or lightning we strongly recommend the use of suitable additional surge protection devices on all electrical equipment. We

For the correct performance of the system the inlet water must meet the below parameters:

<b>Hydrogen sulphide</b>	< 0,3 mg/L	<b>Total hardness</b>	< 120 mg/L
<b>Iron</b>	< 0,3 mg/L	<b>UV transmittance</b>	> 95% - 1 cm
<b>Manganese</b>	< 0,05 mg/L		

*Warranty will not apply to units which fail due to being used on water which does not meet the above water quality parameters.*

recommend the use of an RCD or earth leakage circuit breaker on the power supply to your unit.

The flow rate **MUST** be equal or below the maximum values. Excessive flow will reduce UV dose and may render the unit ineffective.

## **INITIAL INSTALLATION PROCEDURE**

### **Warning**

- Only use the system in the operating conditions indicated on the sticker on the filter bowl.

- if the sticker is tampered, damaged, not legible or missing, applicable working conditions are:

max pressure 8,3 bar, max temperature 40°C.

- If pressure exceeds use limits, protect with a pressure reducing valve.

- Install an “anti-water hammer” system to protect the filter. In case of installation on systems powered by a pump and especially on those equipped with a pressure and flow controller, an additional expansion vessel must be installed between the pump and the first filter unit to minimize pressure fluctuations.



- Use only PTFE sealing tape as a sealant for the connections


**Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** systems have 1” BSPP plumbing connections (Inlet 1” BSPP female, Outlet 1” BSPP male).

1. Before attempting installation, check that the UV lamp and its quartz sleeve are intact inside their respective packaging.

2. Locate a suitable position for the **HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** system remembering to allow 120mm under the housings and at least a chamber length space above the unit for removal of the lamp and sleeve. A power outlet with residual current protection is required.

*You can choose the direction of the water flow through the unit, depending on whether you have water inlet from the left (default setting) or from the right. To reverse the direction of flow, unscrew the filter housings, the UV System, the earthing and the power supply box, reassemble all the components removed so that the UV chamber is on the left, the filter housing inlet on the right and the UV lamp controller is slightly to the left. Re-fit the gauges.*

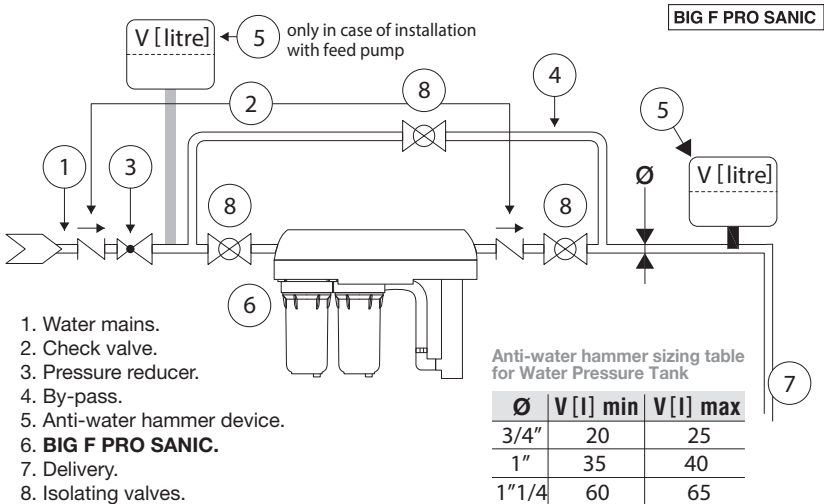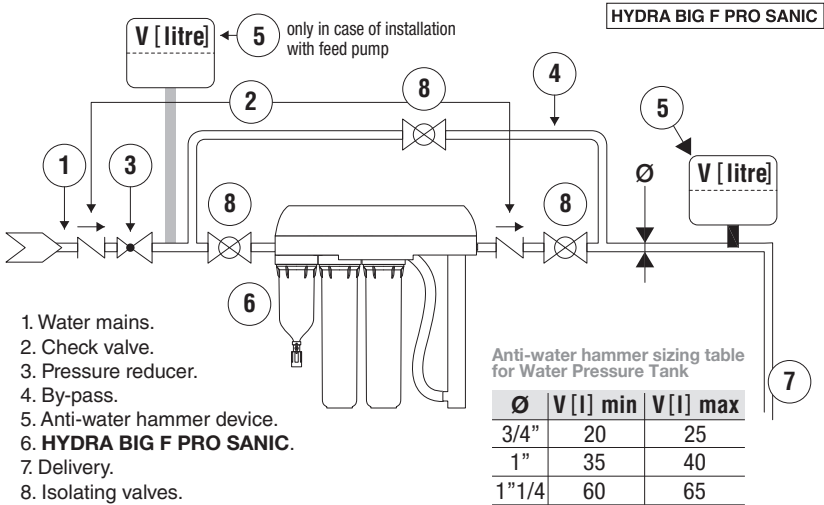

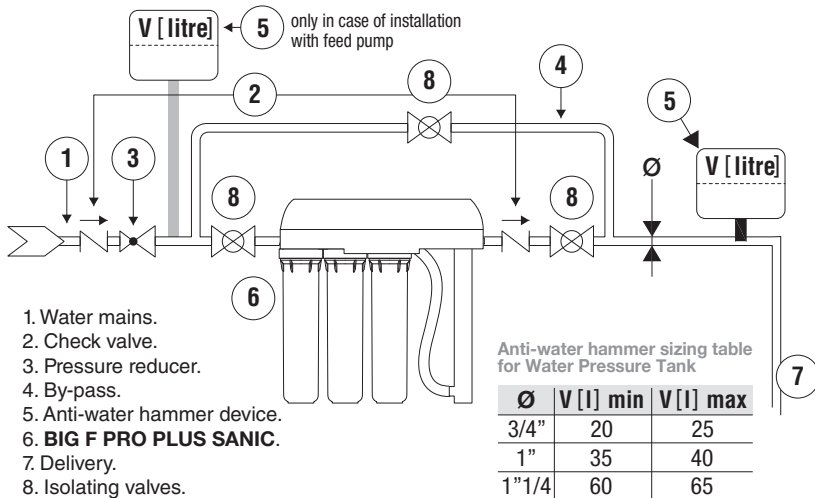

## Warning

Pay attention to ensure the earth strap has been fitted. Check that once reversed the water will be flowing through the filters in the correct direction.


**N.B. The water MUST always pass through the Filter Housings BEFORE the UV unit. The last filtering stage must always be equipped with a 1 µm sediment cartridge.**

3. Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC systems have 3 mounting holes at the rear

of the mounting bracket. Use the mounting holes to mark the desired position on the wall where the fixings are required to go.

4. Drill the holes and install the anchors (fixing anchors not included).

5. Position the mounting bracket on the wall. Insert and tighten the fixings to hold the system securely to the wall.

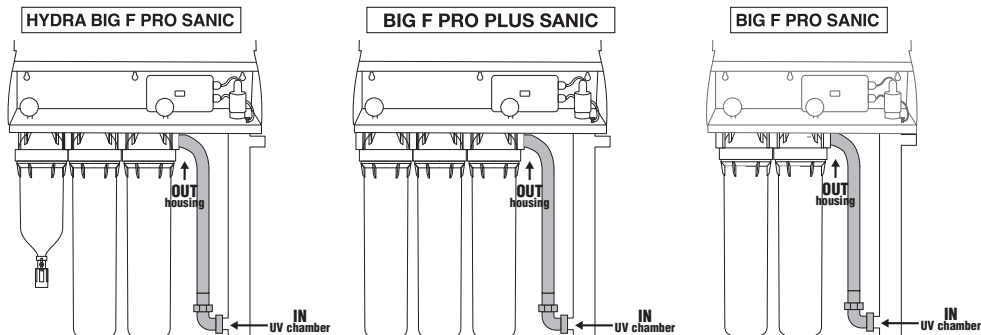

**Note: The outlet is always on the UV side of the system.**

6. Turn off the water mains.

7. Plumb inlet and outlet pipework to the Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC unit.


The inlet is a 1" BSPP female and the outlet is a 1" BSPP male.

8. Tighten both ends of the hose during the installation of the product.

9. Connect the manometers applying some PTFE sealant tape (not included) to the thread and screw them on tightly, but without over-tightening, into the 1/8" threaded ports on the top of the head; at product start-up, in case of leakage of water add some more sealing tape and/or screw more tightly.

10. CONNECTING THE FILTER DISCHARGE TO DRAIN (HYDRA BIG F PRO SANIC ONLY). Connect a

rubber tube reinforced with canvas to the drain funnel or hose fitting at the base of the self-cleaning filter (1st stage), secure with a clamp and have it discharge into drain (Fig. 4-5). The drain point must be lower than the drain funnel or hose fitting. The rubber tube reinforced with canvas must not be more than 2 metres long.

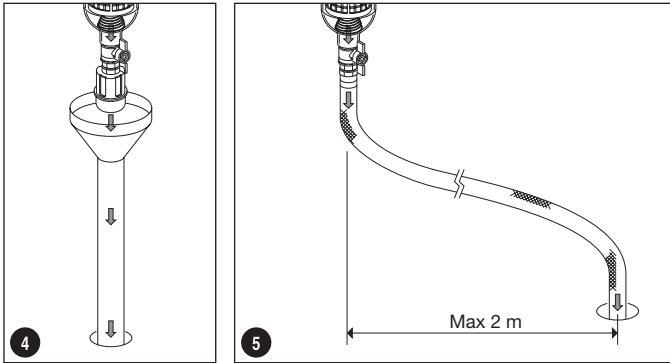

**WARNING:** avoid bending or pinching the rubber tube reinforced with canvas; this could generate counter-pressure against the drain with consequent malfunctions.

11. Once the HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC is in function, check hose and fittings for leaks.

12. ASSEMBLY OPERATIONS:

(A) Open the cover. Remove the lamp connector from the top nut and unscrew the black sleeve bolt.

**warning: pay attention to the blue gasket inside.**

(B) Insert the quartz sleeve carefully centring the seat at the bottom plate of the UV chamber.


(C) Insert the o-ring into the quartz sleeve.


(D) Tighten the sleeve bolt and insert the spring into the quartz tube by dropping it into the chamber.

(E) Slowly insert UV lamp into the quartz sleeve.

(F) Connect the lamp connector to the pins on the lamp.

(G) Push the black cap on the black bolt and turn it clock wise to lock it.

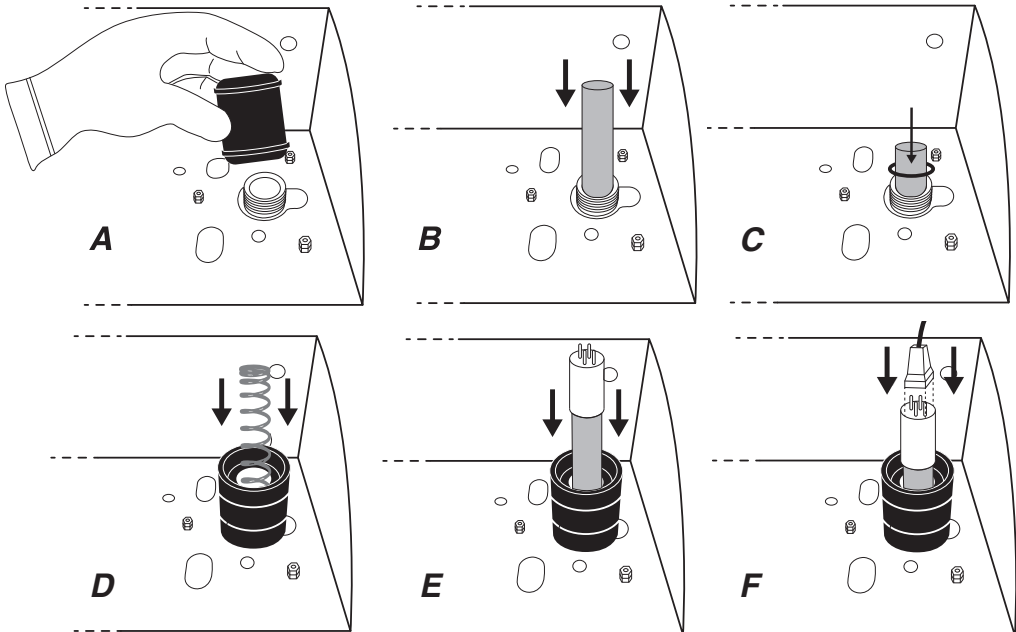

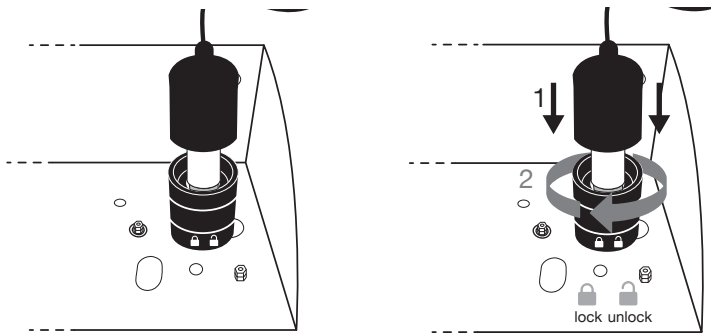

**Use gloves to handle the quartz (glass) and lamp surface as marks or fingerprints may interfere with UV transmission. If lamp is soiled, please clean lamp with an alcohol based cleaner.**

13. Open the housing unscrewing the bowl / Lubricate the oring; check if it is properly located, and free of any damage / Tighten the housing bowl to housing's head using a proper wrench. Do not over-tighten .
14. Turn-on the water mains, paying attention to completely remove the air left inside the housing using the vent valves / Slowly turn-on a water supply (tap) downstream of the HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC / Open the vent-valve of The head, wait for air purge from the vent-valve, then screw and tighten the vent-valve. Flush the unit for 5 minutes at least. then check thoroughly for leaks.
15. Turn the power on and ensure that the lamp is operating (see lamp ballast operation chapter)
16. Close and lock the cover.

**Note:** Your cabinet comes with 1 key for your convenience. Please store it safely.

## OPERATION

- Prior to perform any work on the UV system, always disconnect the power supply.

**Warning: Do not look directly into ultraviolet rays emitted from the UV lamp as they will cause serious burns to unprotected eyes.**

**Warning: do not operate the UVC-emitter (lamp) when it is removed from the appliance enclosure.**

- This appliance contains a UV-C emitter.
- Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin.
- The treated water will seem warm for a short period at first flow. This is because the UV lamp emits heat. When turning on a tap, let the water run for a short time to purge any warm water.


## LAMP BALLAST OPERATION

**Warning: Any operation on the electrical part of the product must be carried out by a qualified electrician, closely following the instructions supplied.**

### Ballast Display Information

**⚠ ATTENTION:** If the display does not turn-on replace the fuse in the UV control panel.


**DISPLAY MESSAGES – Start up:**

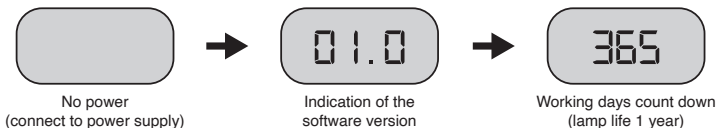


### DISPLAY MESSAGES – Working days:


Press for less than 1 sec to show the lamp working days:

### DISPLAY ALARMS - Troubleshooting:

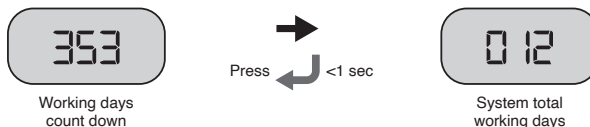

**AL1:** Indicates the end of lamp life (count-down timer shows 0 days) In such case replace the UV lamp and reset the working days count down. To reset the working days count down replace the lamp and press and hold for less than 5 seconds the  button. The value of the days-meter will start to flash. Within 5 sec press the button again to confirm the days-meter reset.


**WARNING: the appliance must be disconnected from the supply before replacing the UV lamp.**  
Press and hold for more than 5 seconds the  button to mute the alarm for 7 days (max 4 times).

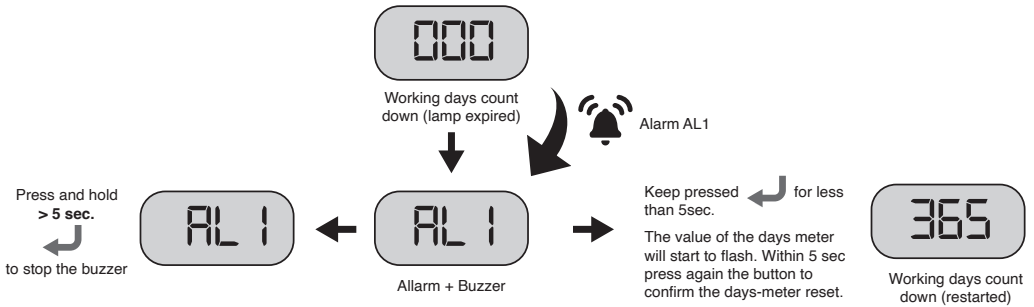

**N.B.** if within 5 sec the lamp reset is not «confirmed», the days-meter reverts back to the current days remaining value.

**AL2:** Indicates lamp failure. Check:


- Lamp connection.
- If the lamp is burnt out by testing a new lamp.
- If the lamp starter has failed by testing a new lamp.

In case of lamp replacement press and hold for less than 5 seconds the  button. The value of the days-meter will start to flash. Within 5 sec press again the button to confirm the days-meter reset.


 **ATTENTION:** Do not replace the lamp with powered unit!

Press and hold for more than 5 seconds the  button to mute the alarm for 7 days (max 4 times).

**Warning**

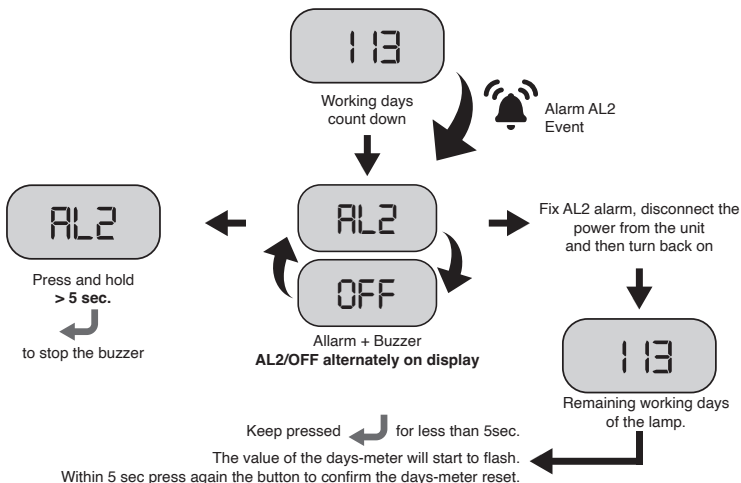

N.B. if within 5 sec it is not "confirmed" the days-meter comes back to the current counting value

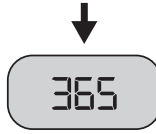


Remaining lifespan  
of the lamp (restarted)

**DISPLAY OFF:** The fuse of the pcb is blown. Unscrew the cap of the power supply box. Remove the small box close to the power supply plug, replace the fuse (mod. 5x20 1,6A Fast).

## BALLAST DISPLAY INFORMATION

**MADE IN ITALY** **PROSYSTEM** **ATLAS FILTRI**


**DAYS COUNTDOWN**





Total Days < 1 sec.  
(\*) Reset < 5 sec.  
Audio alarm OFF > 5 sec.

**Alarms:**  
AL1 = lamp exhaust  
AL2 = lamp OFF  
DISPLAY OFF = replace fuse

•  $t_c$  = max 70 °C

 disconnect main supply  
before removing the cover

(\*) after flashing press again to confirm countdown reset

## Maintenance

**WARNING:** Any operation on the electrical part of the product must be carried out by a qualified electrician, closely following the instructions supplied.

You can obtain replacement parts from your local Atlas Filtri dealer. To maintain performance and warranty, use genuine Atlas Filtri replacements.

REPLACEMENTS LIST	
RE3505056	UV LAMP 56W
RE3505057	QUARTZ SLEEVE 56W (mod. 156-256)
AB3505066	O-RING FOR QUARTZ SLEEVE
RE3505067	UV LAMP 67W
RE3505068	QUARTZ SLEEVE 67W (mod. 267)
RE9020678	KIT 2 ORING + LUBRIKIT
RA0012025	SUN PROTECTION COVER FOR SELF-CLEANING STAGE 1 (only for HYDRA BIG F PRO SANIC model)
RA7221149	DRAIN KIT (only for HYDRA BIG F PRO SANIC model)

REPLACEMENTS LIST CARTRIDGES HYDRA BIG F PRO SANIC	
RA5001020	STAGE 1 CARTRIDGE RAH MOD. 256-267
SA5706911	STAGE 2 CARTRIDGE MOD. 256-267
SA5706906	STAGE 3 CARTRIDGE MOD. 256-267

REPLACEMENTS LIST CARTRIDGES BIG F PRO SANIC	
SA5706611	STAGE 1 CARTRIDGE MOD. 156
SA5706606	STAGE 2 CARTRIDGE MOD. 156
SA5706911	STAGE 1 CARTRIDGE MOD. 256-267
SA5706906	STAGE 2 CARTRIDGE MOD. 256-267

REPLACEMENTS LIST CARTRIDGES BIG F PRO PLUS SANIC	
SA5706911	STAGE 1 CARTRIDGE MOD. 256-267
RE4520VC5	STAGE 2 CARTRIDGE MOD. 256-267
SA5706906	STAGE 3 CARTRIDGE MOD. 256-267

The **HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** series have been designed and manufactured with simple and functional features which make the checking procedures and the periodical servicing particularly easy.

To maintain a high quality of disinfected water, cartridges, lamp and quartz-sleeve should be regularly cleaned/checked/replaced (dependent on water quality and usage).

Maintenance operations may only be carried out by personnel who have been trained and authorized for this work. Flush system for 10 minutes after any period of non-use of more than 2 days. For a period of non-use of 2 weeks or more, it may be necessary to replace the cartridges.

Only original replacement parts from the supplier must be used.

The following are the recommended service intervals for replacement parts:

SERVICE INTERVALS	
<b>Self-Cleaning cartridge:</b> (Hydra Big F Pro Sanic models only)	clean regularly the cartridge with back wash in counter-current as indicated in the introduction section; replace with a new cartridge at least every 48 months.
<b>Sediment cartridges</b>	replace with a new cartridge every 3-6 months or with a pressure drop more than 1Bar(100Kpa/15PSI).
<b>Carbon block cartridge</b>	(for Big F Pro Plus Sanic models only) - replace the cartridge every 3-6 months.
<b>UV lamp</b>	once per 9000 hours/one year.
<b>UV quartz sleeve</b>	quartz sleeve cleaning is recommended at least quarterly, more frequent cleaning may be required depending on your water quality, please seek the advice of your retailer.
<b>O-ring for quartz sleeve</b>	annually.
<b>Bowl O-ring:</b>	REPLACE the BOWL ORING with every CARTRIDGE REPLACEMENT or at least once a year

## ***ROUTINE MAINTENANCE OF THE SELF CLEANING FILTER***

**(for Hydra Big F Pro Sanic models only).**

Routine maintenance consists in cleaning the stage 1 filter cartridge with back-wash in counter-current operation by opening the drain valve for 15/20 seconds. Back-wash in counter-current is performed as indicated in the “**INTRODUCTION**” section. The minimum required flowrate for effective backwashing is 2000 l/h. If the cartridge is not perfectly clean after washing, repeat the operation with the same procedure one or more times until the desired cleanliness is reached. If acceptable cleanliness is not achieved for a good filter operations, follow the extraordinary maintenance procedure as described here following.

## ***EXTRAORDINARY MAINTENANCE OF THE SELF-CLEANING FILTER***

Over time, routine cartridge cleaning may become difficult due to clogging-up of the cartridge net.

In this case, extraordinary cartridge cleaning is required as follows:

- shut-off water flow upstream from the filter;
- release the filter pressure by opening a tap downstream the filter;
- open the filter by unscrewing the bowl from the head using the supplied spanner;
- remove the cartridge (wearing protective gloves to prevent scratches due to worn net);
- clean the cartridge under a jet of cold water and use a soft brush to remove impurities;
- insert the clean cartridge in the bowl; - screw the bowl onto the head;

## ***Cartridge Replacement Procedure***

Prior to performing any work on an **Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC** systems always disconnect the power supply first.

Change the melt blown cartridges at least every six months or when a drop in downstream water pressure of 1 bar or more is observed. Replace the carbon block cartridge every 3-6 months (BIG F PRO PLUS SANIC ONLY) To change the filter cartridges please adhere to the following procedure:

### **Replacement of the cartridge**

Follow standards in force regarding waste disposal of used cartridges.

1. Before opening the filter housing turn-off the water mains.
2. Release the pressure from the product by un-screwing the vent-valve of the head. Then screw and tighten again the vent-valve.
3. Open the housing unscrewing the bowl using the supplied wrench.
4. Remove the used cartridge.
5. Wipe clean the filter housing with cold water and a soft sponge.
6. Open the new cartridge wrap and discard wrap.

7. Put a new cartridge in the filter housing.
8. Change the O-ring in the top of the filter housing. Check if it is properly located, lubricated and free of any damage. Tighten the housing bowl to housing's head using a proper wrench. Do not over-tighten.
9. Turn-on the water mains, paying attention to completely remove the air left inside the housing using the vent valves.
10. Slowly turn-on a water supply (tap) downstream of the **HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC**.
11. Open the vent-valve of the head, wait for air purge from the vent-valve, then screw and tighten the vent-valve.



**REMARK:** let the water flow for at least 5 minutes before use.

### Warning

at re-start after every maintenance operation and/or refill change, when the filter's bowl is unscrewed from head, change the o-ring with a new one and carefully lubricate before tightening the bowl to the head. Make sure that there are no water leaks from the product and especially control the tightening between the housing head and the housing bowl. Continue checking that the tightening is good and there is no water leakage for 48 hours following the installation and start-up. In case of leakage, open the housing, remove the o-ring from the bowl, place a new o-ring and apply lubricant, then re-tighten the bowl to head and repeat the leakage check as above.

*Ask your vendor for original o-rings, lubricant and other spare parts.*

### Lamp Replacement Procedure

Procedure for the UV lamp replacement (9000 h/one year max)



**WARNING: Do not operate the UV-C emitter when it is removed from the appliance enclosure.**

- This appliance contains a UV-C emitter.
- Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin.



*Use gloves to handle the quartz (glass) and lamp surface as marks or fingerprints may interfere with UV transmission.*

- 1) Disconnect the power supply and turn off the water.
- 2) Unlock and open the metallic cover.
- 3) Release the water pressure using the valves on the top of the mounting bracket.



**ATTENTION:** Wait until the lamp has cooled down.


- 4) Lift the black cap slightly turning, carefully loosen the electrical 4-pins connection (**A**), and extract the old lamp from the quartz sleeve (**B**).
- 5) Remove the lamp from the packing, handling it carefully by its ends.
- 6) Insert the new lamp into the quartz sleeve of the UV System.
- 7) Connect the lamp to the electrical connection and reposition the black cap on the black bolt and turn it clockwise to lock it.
- 8) Reconnect the power supply and turn on the water.

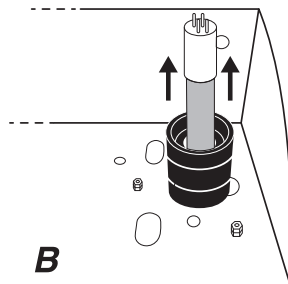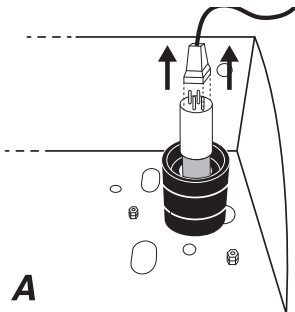



## Quartz Sleeve Maintenance/Replacement Procedure

Minerals dissolved in water form a coating on the quartz sleeve. The quartz sleeve must be regularly checked and cleaned to remove this coating in order to maintain disinfection performances.

- 1) Disconnect the power supply and turn off the water
- 2) Unlock and open the metallic cover.
- 3) Release the water pressure using the filter housing valves on top of the housing head.
- 4) Remove the lamp, as for the lamp replacement procedure.

-  **ATTENTION:** Wait until the quartz sleeve has cooled down.
- 5) Unscrew the sleeve-bolt and extract the quartz sleeve with care.
  - 6) Clean the quartz sleeve by wiping it with a cloth soaked with an acid solution such as vinegar, lemon or calcium lime rust remover (CLR). If quartz sleeve cannot be cleaned or is damaged, it must be replaced with a new one.
  - 7) Repeat steps of initial installation procedure (page 6).
  - 8) Turn on water checking for leaks.
  - 9) Remount the lamp, its electrical connection and cover.
  - 10) Reconnect the power supply.

 **REMARK:** after maintenance, slowly turn on a water supply (tap) downstream of the unit and let the water flow for at least 5 minutes before use.

 **REMARK:** After a period of inactivity, it is suggested to perform all the maintenance operations, replacing the sediment cartridges, cleaning the quartz-sleeve and checking/replacing the UV lamp. After these maintenance operations, slowly turn on a water supply (tap) downstream of the unit and let the water flow for at least 5 minutes before use.

## UV system characteristics

**HYDRA BIG F PRO SANIC 256 - BIG F PRO PLUS SANIC 256 - BIG F PRO SANIC 156 - 256**

GENERAL INFORMATION	
Max flow rate	54 l/m (40 mJ/cm <sup>2</sup> ) - 70 l/m (30 mJ/cm <sup>2</sup> )
UV-C transmittance	95% - 1 cm
UV-C dose	40 mJ/cm <sup>2</sup> - 30 mJ/cm <sup>2</sup>
Water temperature range	4° - 40° C
Total consumption	61W
Mounting	vertical or horizontal

UV REACTOR	
Material	Stainless steel 304
Connections	Thread 1" BSP Male
Max working pressure	8,3 bar
Protection class	IP 54
Shape	Z
Flow direction	From bottom to top

UV LAMP	
Number	1
Lifespan	9000 hr
Lamp power	56 W
Type	LPHO

CONTROL PANEL	
Material	Thermoplastic
Dimension	218x113x60 mm
Protection class	IP 54
Ambient temperature range	4° - 40° C

Power supply	110-240 V / 50-60 Hz
Lamp cable length	0,6 m
Power supply cable	2 m
Feed plug	AUS Type I / SCHUKO Tipo F (CEE 7/4)
Monitor display	Digital
Days meter	Yes for total system life
Resettable days meter	Yes for lamp life control
Audio alarm	With mute options

## **uv system characteristics**

### **HYDRA BIG F PRO SANIC 267 - BIG F PRO PLUS SANIC 267 - BIG F PRO SANIC 267**

<b>GENERAL INFORMATION</b>	
Max flow rate	72 l/m (40 mJ/cm <sup>2</sup> ) - 95 l/m (30 mJ/cm <sup>2</sup> )
UV-C transmittance	95% - 1 cm
UV-C dose	40 mJ/cm <sup>2</sup> - 30 mJ/cm <sup>2</sup>
Water temperature range	4°- 40° C
Total consumption	73 W
Mounting	vertical or horizontal

<b>UV REACTOR</b>	
Material	Stainless steel 304
Connections	Thread 1" BSPP Male
Max working pressure	8,3 bar
Protection class	IP 54
Shape	Z
Flow direction	From bottom to top

<b>UV LAMP</b>	
Number	1
Lifespan	9000 hr
Lamp power	67 W
Type	LPHO

<b>CONTROL PANEL</b>	
Material	Thermoplastic
Dimension	218x113x60 mm
Protection class	IP 54
Ambient temperature range	4°- 40° C
Power supply	110-240 V / 50-60 Hz
Lamp cable length	0,6 m
Power supply cable	2 m
Feed plug	AUS Type I / SCHUKO Tipo F (CEE 7/4)
Monitor display	Digital
Days meter	Yes for total system life
Resettable days meter	Yes for lamp life control
Audio alarm	With mute options

*Atlas Filtri HYDRA BIG F PRO SANIC / BIG F PRO SANIC / BIG F PRO PLUS SANIC*

*Water Treatment System*

**EC DECLARATION OF CONFORMITY**

The undersigned hereby declares, under full responsibility, that the unit:

**HYDRA BIG F PRO SANIC 256 - 267  
BIG F PRO SANIC 156 - 256 - 267 MODELS  
BIG F PRO PLUS SANIC 256 - 267**

IS IN COMPLIANCE WITH

- AS/NZS 60335.2.109:2011 +A1 +A2 with AS/NZS 60335.1:2020 +A1
- 2014/35/UE (low voltage directive)
- 2014/30/UE (electromagnetic compatibility)
- 2015/863/UE (RoHS3)
- 2012/19/UE (WEEE)
- IEC -EN 60204-1 norms (safety of machinery-electrical equipment of machinery)
- IEC -EN 55022 norms (characteristics of radio interference)
- D.Lgs. 31/2001 (Implementation of Directive 2015/1787/UE on the quality of water intended for human consumption)
- 2014/68/UE (art.4 comm.3) (PED)

The validity of CE marking is subordinated to the equipment integrity. Any modification, if not authorized, will cancel the use of the CE marking. This will occur in case the relevant risks have not been previously analyzed by our company, and a new EC Declaration of Conformity has been issued.

